

USER AND INSTALLATION INSTRUCTIONS



Printed : 23 Aug.'2004
USM-45-018-1

General Information

Please read this booklet thoroughly before you use this appliance. It is important that you understand all the control functions before commencing to use your Baumatic appliance.

Please remember the advice and warnings shown on page 5 which is headed: 'IMPORTANT-Warning and Safety Instructions'.

This appliance is designed for domestic household use only. When integrated into a range of kitchen units, the following minimum dimensions are required-600 mm. gap, 820 mm.-870 mm. height.

The use for any other purpose or in any other environment without the express agreement of Baumatic Ltd, would invalidate any warranty or liability claim.

Your new appliance is guaranteed against electrical or mechanical defects subject to certain exclusions noted in Baumatic Ltd Conditions of Guarantee.

The foregoing does not affect your statutory right.

The Warranty applies to Great Britain and Northern Ireland only.

In the event that you require any After Sales Service or advice, please contact the Baumatic Service Department on telephone number-0118 933 6911.

Before using this appliance ensure that the protective packaging has been removed from the machine.

To aid the protection of the environment, please sort the packaging materials into different types and dispose of them in accordance with the local waste disposal laws. Any further information on waste disposal can be obtained from your local Environment Agency office.

When first used a slight residue of water may be found in the wash cabinet, this is perfectly normal and results from factory quality inspection.

This appliance has been constructed and distributed in compliance with the essential requirements of the following EEC DIRECTIVES and EUROPEAN NORMS:

CE marking-93/68 Low Voltage-73/23 EMC-89/336

Safety Standards-EN 60 335-1,En 60 335-2-5.

As Baumatic have a policy of continued product improvement, the right is reserved to adjust and make any modifications deemed necessary without notification.

For future reference please record the following information which can be found on the Rating Plate and the date of purchase which can be found in the invoice:

 
Model Number _____

Serial Number _____

Date of Purchase _____






Features

- | | | |
|------------------------|--------------------------|--------------------|
| 1. Freezer Compartment | 6. Temperature Control | 11. Bottle Locker |
| 2. Freezer Shelf | 7. Multi-Airflow Control | 12. Utility Pocket |
| 3. Twist Ice Maker | 8. Shelf | 13. Egg Pocket |
| 4. Ice Cube Box | 9. Vegetable / Fruit Bin | 14. Freezer Pocket |
| 5. Meat Tray | 10. Bottle Pocket | |

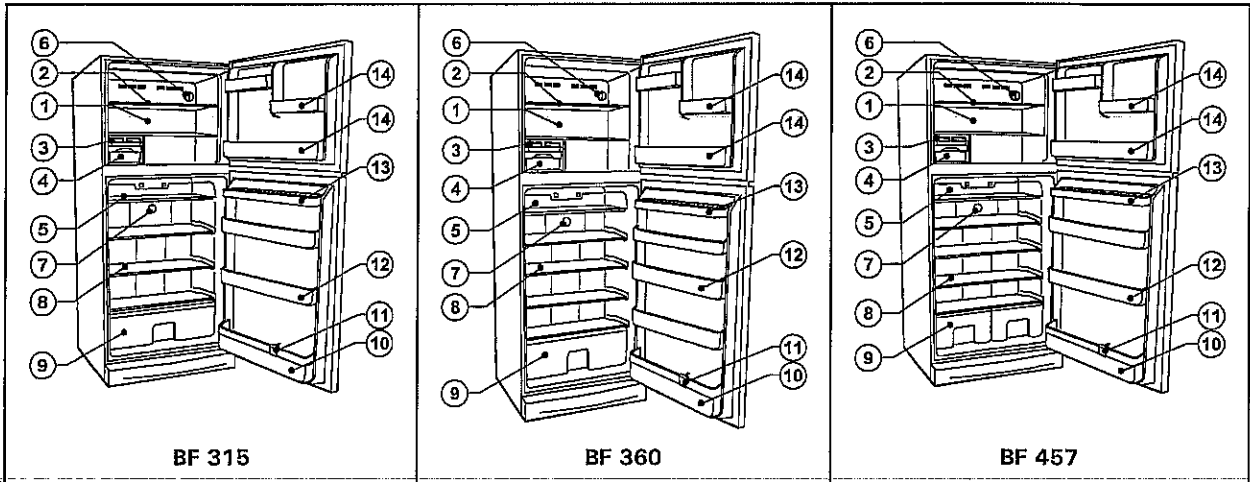

Where to place your refrigerator

     1. Select a place with strong, level floor.
If the floor is not quite level, adjust the height of the screw accordingly.
2. Allow five inches of space between the refrigerator's back and the wall.
3. Avoid direct sunlight and heat. Direct sunlight may affect the enamel coating. Heat sources nearby will cause higher electricity consumption.
4. Avoid very moist place. Too much moisture in the air will cause frost to form very quickly on the evaporator, and the refrigerator will have to be defrost very frequently.
5. Don't connect multiple appliances to one outlet. It may cause fire. To avoid the possibility of electrical shock, ground the refrigerator properly. The earth screw is located on the rear side of the refrigerator.

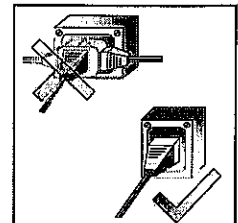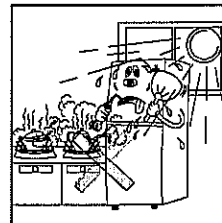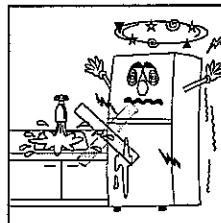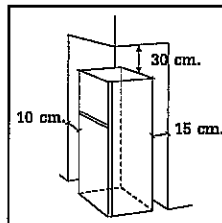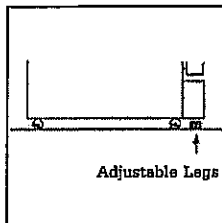

Make a test run

1. Clean the refrigerator thoroughly.
Wipe the outside with a soft dry cloth, the inside with a damp cloth.
2. Keep the door open and plug the AC cord into an electricity outlet. The interior lamp should light.
3. Turn the thermostat dial to "MAX".
Close the door and let the refrigerator operate for 15-20 minutes.
4. After about 20 minutes open the refrigerator door.
Test and see whether the unit is refrigerating properly by placing your hand in front of the cold air outlet. If cold air is flowing into the refrigerator, the unit is functioning properly.
5. If the test run is not satisfactory.
Check your electricity supply (blown fuse?).
If the source of trouble can't be located, contact your dealer or your Authorized Service Center.

Note :

In extremely humid places, attach a ground wire for extra safety. The ground wire terminal is located at the rear left corner of the refrigerator.

Sound of flowing is noticeable.

This sound is caused by the refrigerant flowing into the refrigerating device. It does not denote a malfunction.

Attention

If the unit is turned off or unplugged, you must allow at least seven minutes before restarting or replugging the unit.

Temperature Control

The refrigerator is equipped with 2 independent controls to control the degree of cooling of the refrigerator & freezer compartment.

Dial : " MIN " : Minimum Setting

Dial : " MED " : Medium Setting

 
Dial : " MAX " : Coldest

Multi-Airflow Control

MIN. : Low volume of air circulation in refrigerator compartment.

MED. : Medium volume of air circulation in refrigerator compartment.

MAX. : High volume of air circulation in refrigerator compartment.

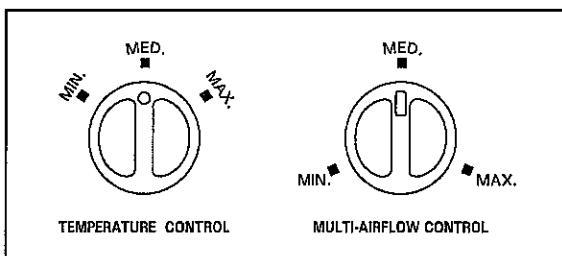


How to remove ice cubes

When the ice cubes are made in twist ice maker, turn the lever clockwise to empty the ice into ice cube box.

Store the ice cubes in the ice cube box.

Do not store wet ice cubes or they will stick together.

 Do not use the "ice cube box" as an ice making tray, or it will be damaged.

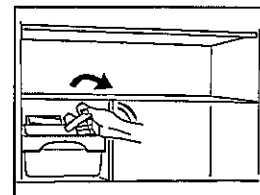

Deodorizer

This refrigerator is equipped with a deodorizer that traps and breaks down unpleasant smells, thus keeping the air in the refrigeration compartment fresh. This deodorization system is located in the cooling air passage in the wall of the refrigeration compartment.

Note : To ensure maximum deodorizing performance, wrap food-stuffs that emit powerful odours in plastic wrapping film.

Food Storage

- Refrigerated air goes down at the rear of the fresh food compartment and rises up at the front. Then, store the foodstuffs such as fish and meats which require quick refrigeration to the rear of the compartment.
- Leave spaces among foodstuffs to help air circulation.
- Foodstuffs which are easily dried should be well wrapped with waxed paper, aluminum foil or plastic film.
- Wrap fish and smoked meats in moisture-vapor-proof material to prevent transfer for odours.
- Pre-cool hot foods, wrap them with plastic film or put them in the airtight receptacle.
- Wipe the water on the surface of the bottles before storing them.
- Be sure not to store bottles such as beer, cokes, etc. in the freezer compartment.
- Do not put vegetables which are liable to freeze at the rear part of the shelves.
- If planning to keep fresh fish and meats for a long period, wrap them in freezer paper and store in the freezer compartment.

IMPORTANT-Warning and Safety Instructions

- Do not use inflammable sprays such as lacquer and paint near the refrigerator, because there is a danger of igniting.
- Do not operate the refrigerator in the presence of explosive gas to avoid a fire or an explosion by ignition of the electric contact of the refrigerator.
- Be careful no to splash water on the back of the refrigerator the insulation of electric parts will be impaired by water.
- Do not touch the back of the refrigerator and the mechanical parts at the back of the refrigerator, because their temperature is high.
- Do not use acids, chemical thinner, gasoline or benzine for cleaning any part of the refrigerator. Boiling water and benzine are especially harmful for plastic parts.
- If the illuminating lamp does not work properly. The replacement of lamp is able to do by disconnect the power supply, detach the shield light cover then remove the lamp from the lamp socket, replace the lamp and reassembly the lamp.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Do not damage the refrigerant circuit.

How to defrost

The defrosting will automatically operate.

 
No manual control is required.

The defrosted water will drain into evaporation tray and automatically evaporate by tube evaporator condenser.

The evaporation tray should be cleaned once a month.

Cleaning the evaporation tray

Since dust accumulated on the evaporation tray will decrease the evaporation efficiency, remove the tray to clean.

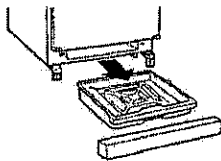

Cleaning and maintenance

Your refrigerator does not require any special maintenance. To clean the inside, use a soft cloth with water, mild soap suds, or some mild detergent. Wash ice cube tray, evaporation tray and shelves in a mild detergent solution and dry with a soft towel. Stains on the outside can also be removed with a soft cloth and some mild detergent.

- Removable parts may be rinsed with water.
- Don't forget to clean the door gasket. Especially the bottom gasket is liable to dirty.
- Wipe the door with a dry cloth when water splashes or it rusts.
- Occasionally remove dust and other particles which may collect at the back of the refrigerator and the condenser under the cabinet to keep heat radiating efficiency high. For safety, unplug the refrigerator before cleaning.

Product Specification for Customer

Model	BF 315	BF 360	BF 457
Total Capacity (Liter / Cu. Ft.)	315 / 11.1 (Australian Std.)	360 / 12.7 (Australian Std.)	457 / 16.1 (Australian Std.)
Star Rating	* ***	* ***	* ***
Defrosting Type	Automatic	Automatic	Automatic
Voltage (V)	220-240	220-240	220-240
Frequency (Hz)	50-60	50-60	50-60
Compressor (Watt)	150	175	175
Multi Airflow	Yes	Yes	Yes
CFC-Free	R-134a	R-134a	R-134a
Chilled Room	1	1	1
Crystal Shelf	3	4	4
Vegetable / Fruit Bin	1	1	2
Egg Pocket	1 (20 pcs.)	1 (20 pcs.)	1 (24 pcs.)
Utility Pocket	2	3	2
Bottle Pocket	1	1	1
Twist Ice Maker	2	2	2
Ice Cube Box	1	1	1
Freezer Shelf	2	2	2
Freezer Pocket	3	3	3
Deodorizer	Yes	Yes	Yes
Evaporation Tray	Front	Front	Front
Net Weight (kg.)	65.0	70.0	80.0
Gross Weight (kg.)	71.5	77.5	90.0
Overall Dimension (mm.)	606 x 670 x 1522	606 x 670 x 1700	730 x 700 x 1663
Packing Dimension (mm.)	657 x 749 x 1635	657 x 749 x 1813	781 x 779 x 1776
Container Load 20 FT. (Unit)	34	24	-
Container Load 40 FT. (Unit)	75	54	45
Container Load 40 FT. High (Unit)	75	73	-

Notes : Design and specifications subject to change without prior notice for product improvement.

BAUMATIC Ltd

CONDITIONS OF GUARANTEE

Dear Customer,

Included with your new Baumatic appliance is a guarantee registration card, please complete this and return at your earliest convenience.

This guarantee is in addition to your statutory legal rights and will not in any way hinder any legal rights.

The conditions of the guarantee, which applies, to your Baumatic appliance are as follows:

All 'Work' in relation to the Guarantee must be carried out by Baumatic Ltd or an approved service agent of Baumatic Ltd. Any claims made under the terms of the guarantee must be supported by the original invoice / bill of sale issued at the time of purchase.

The guarantee period starts from the date of the original purchase and the manufacturer will provide the parts and labor required to repair the appliance should breakdown occur as a result of mechanical / electrical failure. This service will be given Free of charge within the Guarantee period. An additional Insurance scheme is available should you wish to extend the warranty period.

This guarantee applies to UK mainland and Northern Ireland only.

THIS GUARANTEE DOES NOT COVER:

Any damage caused by transit, misuse, or neglect.

Cosmetic and perishable parts: plugs, fuses, light bulbs, light covers, cosmetic trims, cables, filters and attachments, knobs, any rubber and seals, ceramic or glass surfaces, dents, scratches, paintwork.

Attachments / Accessories: trivets and handles, griddles, pan stands, shelves, burner caps and collars, oven liners. Plus any additions thereafter.

Periodic maintenance, the repair or replacement of parts due to natural wear and tear.

Material discoloration, corrosion.

Incorrect installations, modifications or repair by any unauthorized personnel.

Use of non-Baumatic parts.

Damage caused by foreign objects or substances.

Appliances used for non-domestic use.

Operation on unsuitable voltage, water or gas supplies.

Accidents, Civil war, acts of God or any cause beyond the control of Baumatic Ltd.

PLEASE NOTE ALL GUARANTEES ARE NOT TRANSFERABLE

SALES

SERVICE

SPARES

TEL 0118 933 6900

TEL 0118 933 6911

TEL 0118 933 6922

FAX 0118 931 0035

FAX 0118 986 9124

For further information or any other query you may have, please contact one of the above numbers.

Thank you for buying Baumatic.