


**IMPORTANT! PLEASE READ THIS MANUAL AND  
KEEP IT FOR FUTURE REFERENCE**

THIS MANUAL CONTAINS SECTIONS OF **SAFETY INSTRUCTIONS, OPERATING  
INSTRUCTIONS AND TROUBLESHOOTING TIPS, ETC.**

# BAUMATIC

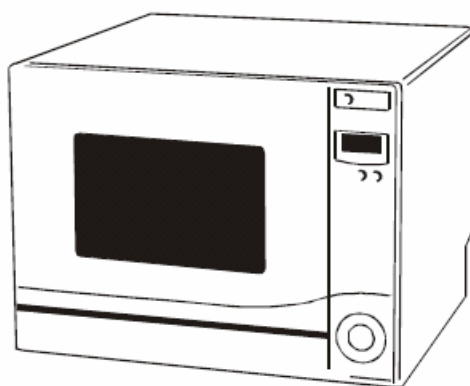

MINI4  
DISHWASHER  
COUNTERTOP  
DISHWASHER

20/02/05

**INSTRUCTION MANUAL**

CAREFULLY READING IT BEFORE USING THE DISHWASHER WILL HELP YOU USE  
AND MAINTAIN THE DISHWASHER PROPERLY.



**BEFORE CALLING FOR SERVICE**

REVIEWING THE SECTION ON TROUBLESHOOTING TIPS WILL HELP YOU SOLVE SOME COMMON PROBLEMS WITHOUT THE NEED TO ASK FOR HELP FROM PROFESSIONAL TECHNICIANS.



**PLEASE NOTE:**  
THE MANUFACTURER RESERVES THE RIGHT TO MAKE MODIFICATIONS TO PRODUCTS WITHOUT GIVING PRIOR NOTICE.

**CONTENTS**

• **SAFETY FIRST!**

SAFETY INFORMATION .....3-4  
*\*Please read this before using your dishwasher!*

• **KNOWING YOUR DISHWASHER**

YOUR MINI 4 DISHWASHER .....5  
Incl. Control panel & Display .....5

• **USING YOUR DISHWASHER**

WATER SOFTENER .....6  
DETERGENT .....7  
RINSE AID .....7  
LOADING YOUR DISHWASHER.....8-10  
STARTING A WASH CYCLE .....11-12  
FILTERING SYSTEM .....13  
CLEANING AND MAINTAINING YOUR DISHWASHER .....13-15

• **BEFORE YOU CALL FOR SERVICE...**

TROUBLESHOOTING .....16  
ERROR CODES.....17

• **MISCELLANEOUS**

HOW TO INSTALL .....18-20  
DISHWASHER CHARACTERISTICS .....21  
FINAL CHECKLIST BEFORE STARTING.....22  
CONDITIONS OF GUARANTEE.....23  
CONTACT DETAILS.....24

## IMPORTANT SAFETY INFORMATION




# WARNING!

READ BEFORE USING!



### ELECTRICAL SAFETY

 This appliance complies with Directives 89/336/EEC, 73/23/EEC and following changes.

- **NOTE** - This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance of electrical current. You will be able to tell if it is because a non-grounded appliance will give off an electrical discharge.
- IF POWER SUPPLY CORD IS DAMAGED, IT MUST ONLY BE REPLACED BY THE MANUFACTURER OR ITS SERVICE AGENT OR A SIMILARLY QUALIFIED PERSON TO AVOID A HAZARD.
- THIS APPLIANCE IS FITTED WITH A SAFETY FUNCTION THAT AUTOMATICALLY STOPS THE OPERATION OF THE DISHWASHER WHEN IT IS EXPOSED TO ANY HEAVY DISTURBANCE ON ITS MAINS.
- THIS APPLIANCE MUST BE POSITIONED SO THAT THE PLUG IS ACCESSIBLE.

### CHILD SAFETY

- DO NOT ABUSE OR FORCE THE DISHWASHER. DO NOT SIT ON OR STAND ON ITS DOOR OR DISH RACK – TIPPING HAZARD AND YOUR DISHWASHER COULD BECOME DAMAGED OR DEFORMED.
- KEEP CHILDREN AWAY FROM DETERGENT, RINSE AID AND THE OPEN DOOR OF THE DISHWASHER AS THERE COULD BE DETERGENT LEFT INSIDE.
- SUPERVISE YOUNG CHILDREN TO ENSURE THEY DO NOT PLAY WITH THE APPLIANCE.
- SUPERVISE INFIRM PERSONS IF THEY MUST USE THE APPLIANCE.
- THIS APPLIANCE IS NOT INTENDED FOR USE BY YOUNG CHILDREN.

## **BEFORE USING YOUR BAUMATIC MINI4 DISHWASHER:**

- **SOME ITEMS ARE UNSUITABLE FOR WASHING IN YOUR DISHWASHER. PLEASE SEE PAGE 9 FOR A LIST OF THESE ITEMS.**
- **DO NOT TAMPER WITH THE CONTROLS.**
- **WHEN LOADING ITEMS TO BE WASHED:**
  - 1) **Keep sharp items like knives away from the door seal.**
  - 2) **Load sharp knives with the handles up to prevent injuries.**
- **DO NOT SPRAY WATER ON THE APPLIANCE. DOING SO MAY CAUSE THE FAILURE OF ELECTRICAL PARTS OR ELECTRIC SHOCK.**
- **THE APPLIANCE IS TO BE CONNECTED TO THE WASH MAINS USING NEW HOSE-SETS. OLD HOSE-SETS SHOULD NOT BE RE-USED.**
- **THE DISHWASHER SHOULD BE CONNECTED TO THE COLD WATER SUPPLY ONLY. NOTE THAT THE TEMPERATURE OF THE WATER COMING INTO YOUR DISHWASHER WILL AFFECT THE TIMES OF YOUR DISHWASHER'S CYCLES. THIS SHOULD BE BY A NEGLIBLE AMOUNT, OWING TO THE DIFFERENCES IN THE TEMPERATURES OF WATER MAINS FROM PLACE TO PLACE AND AT THE TIME OF YEAR.**
- **DO NOT USE THE DISHWASHER FOR INDUSTRIAL AND COMMERCIAL USE, OR ANY OTHER PURPOSES.**
- **THIS DISHWASHER IS DESIGNED FOR NORMAL HOUSEHOLD USE ONLY**
- **ONLY USE AUTOMATIC DISHWASHER DETERGENT, NOT SOAP OR LAUNDRY DETERGENT. NEVER USE SOLVENTS AS THIS COULD RESULT IN AN EXPLOSION!**

---

---

## **DURING USE**

---

---


- **DO NOT USE THE DETERGENT FOR HAND WASHING. THE DETERGENT FOR THE DISHWASHER SHOULD BE USED FOR NORMAL OPERATION OF THE APPLIANCE ONLY.**

**DO NOT OPEN THE DOOR WHEN THE LCD DISPLAY READS: 'HIGH TEMPERATURE.' THE HOT STEAM MAY CAUSE PERSONAL INJURY.**

## **AFTER USE**

- **ALWAYS KEEP THE DOOR CLOSED TO AVOID DANGER OF TRIPPING.**
- **CHECK THAT THE DETERGENT DISPENSER IS EMPTY AFTER COMPLETION OF WASH CYCLE.**
- **IF LEAVING UNUSED FOR A LONG TIME, DISCONNECT THE WATER SUPPLY (SEE PAGE 20).**



Your MINI 4 Dishwasher

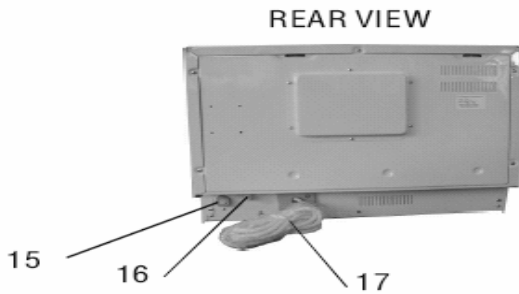

- 1. Window
- 2. Front Panel
- 3. Door lock
- 4. LCD
- 5. Pause/Start key
- 6. Program key
- 7. Power (ON/OFF) Button
- 10. Dish Rack (Not Shown)

- 8. Rinse agent dispenser
- 9. Spray Arm
- 10a. Cutlery Basket(not shown)
- 11. Filter
- 12. Detergent Dispenser
- 13. Door Assembly
- 14. Door Latch Mechanism
- 15. Water Inlet Connection
- 16. Drain Hose Connection
- 17. Power Cord
- 18. Water softener (Not Shown)

Control panel and the LCD display

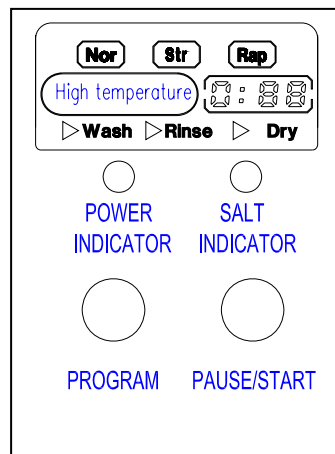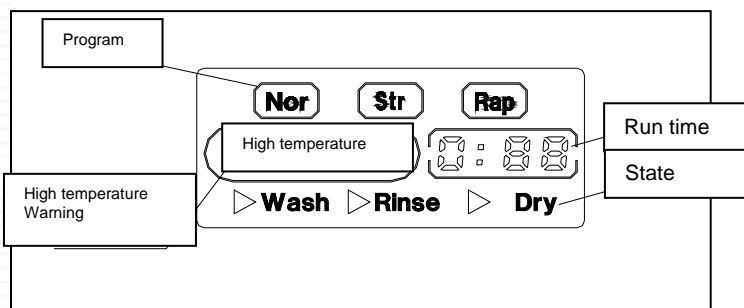

1. The power indicator: it will light up when the machine comes on.
2. The salt indicator: it will light up when the salt runs low in the softener container.

runs low in the softener container. Please add more salt to the container (see p.6) if the salt indicator light comes on.

3. Program Key: you can select the program by pushing the program key;
4. Pause/Start key: you can start or pause the program by pushing the Pause/Start key;

**Note on chemicals used by your dishwasher:**

Your dishwasher is equipped with rinse aid and water softening dispensers. Using detergent, rinse aid and salt individually will give the best possible results as this will give the correct dosage of each chemical to suit your needs.

- *Using Two-in-One or Three-in-One tablets may not give the best results when used in your appliance, and may not be suitable for the type of water supply in your home, as they contain pre-determined quantities of salt, rinse aid and detergent and cannot be adjusted to the individual requirements.*
- *If you are going to use 3-in-1 (or 2-in-1) tablets, we suggest that you contact the manufacturer before use or if you experience poor results in the wash performance and ask for assistance from them.*

**WARNING:**

IF YOU USE 3-IN-1 OR 2-IN-1 TABLETS, BE SURE NOT TO ADD SALT AND/OR RINSE AID TO THE APPLIANCE AS THESE TABLET TYPES ALREADY CONTAIN SALT AND/OR


RINSE AID. **ADDING SALT AND RINSE AID TO YOUR DISHWASHER'S COMPARTMENTS IN A CYCLE INVOLVING A 3-IN-1 OR 2-IN-1 TABLET WILL RESULT IN OVERDOSING OF INDIVIDUAL CHEMICALS AND MAY CAUSE OVERFLOWING OF WATER AND SUDS.**

**YOUR DISHWASHER'S WATER SOFTENING FEATURE**

**HOW TO USE THE WATER SOFTENER.**

THE HARDNESS OF THE WATER VARIES FROM PLACE TO PLACE. IF HARD WATER IS USED IN THE DISHWASHER, DEPOSITS WILL FORM ON THE DISHES AND UTENSILS. YOUR DISHWASHER IS EQUIPPED WITH A WATER SOFTENER WHICH USES A SALT SPECIFICALLY DESIGNED TO ELIMINATE THE MINERALS FROM THE WATER THAT WOULD OTHERWISE LEAVE DEPOSITS ON YOUR DISHES AFTER WASHING.

***YOUR WATER SOFTENER'S SALT CONTAINER NEEDS TO BE LOADED WITH DISHWASHER SALT BEFORE YOU USE YOUR DISHWASHER FOR THE FIRST TIME. PLEASE FOLLOW THESE DIRECTIONS FOR OPTIMUM PERFORMANCE:***

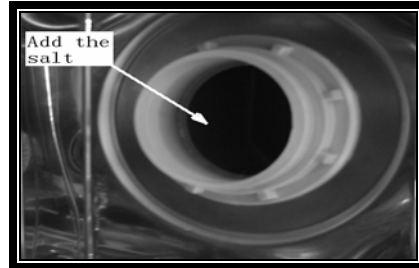

**LOADING THE SALT INTO THE CONTAINER.**

- 1) UNSCREW THE CAP FROM THE SALT CONTAINER ANTICLOCKWISE. THE CONTAINER IS ON THE RIGHT HAND SIDE OF THE INNER BOX.
- 2) LOAD THE SALT INTO THE CONTAINER. EACH TIME YOU MAY LOAD 250G OF SALT, WHICH CAN BE USED FOR 15 CYCLES.
- 3) FILL THE WATER INTO THE SALT CONTAINER UNTIL A SMALL AMOUNT OF WATER COMES OUT (THIS IS VERY IMPORTANT WHEN YOU USE IT FOR THE FIRST TIME).
- 4) SCREW THE CAP BACK ON CAREFULLY.

**NOTE:**

- 1) **LOAD THE SALT BEFORE THE BEGINNING OF A WASH CYCLE SO AS TO PREVENT CORROSION.**
- 2) **USE ONLY DISHWASHER SALT. OTHER TYPES OF SALT CAN DO IRREPARABLE DAMAGE TO YOUR APPLIANCE.**

**USING A RINSE AID**

***YOU CAN HELP PREVENT UNSIGHTLY SPOTS ON DISHES AND GLASSWARE, AND REDUCE DRYING TIME BY USING RINSE AID. A RINSE AID IS SPECIALLY FORMULATED TO RINSE AWAY***

**FOOD AND DETERGENT RESIDUES THAT CAN BE LEFT BEHIND ON YOUR DISHES. USED REGULARLY, RINSE AID WILL AUTOMATICALLY PROVIDE YOU WITH CLEANER DISHES EVERY TIME YOU WASH.**

- TO FILL THE RINSE AID DISPENSER, UNSCREW THE DISPENSER CAP LOCATED AT THE BACK OF THE INNER BOX AT THE TOP RIGHT.
- ADD THE RINSE AGENT SLOWLY INTO THE CONTAINER UNTIL IT JUST REACHES THE BOTTOM OF THE FILLING CAP INSIDE THE DISPENSER OPENING.
- REPLACE THE CAP.
- THE DISPENSER AUTOMATICALLY RELEASES THE RINSE AID INTO THE FINAL RINSE WATER.




## **USING DETERGENT IN YOUR DISHWASHER**

### ***USING THE RIGHT DETERGENT***

USE ONLY DETERGENT SPECIFICALLY MADE FOR USE IN DISHWASHERS, AS OTHER TYPES WILL CAUSE OVERSUDSING AND FROTHING. IF YOUR DETERGENT IS OLD AND/OR LUMPY, THROW IT AWAY. OLD DETERGENT LOSES ITS WASHING POWER. LUMPY DETERGENT WON'T DISSOLVE.

### **HOW MUCH DETERGENT SHOULD YOU USE?**

- THIS DEPENDS ON IF YOUR WATER IS 'HARD' OR 'SOFT'.
- HARDER WATER REQUIRES MORE DETERGENT TO GET DISHES CLEAN
- SOFT WATER REQUIRES LESS DETERGENT TO GET DISHES CLEAN.

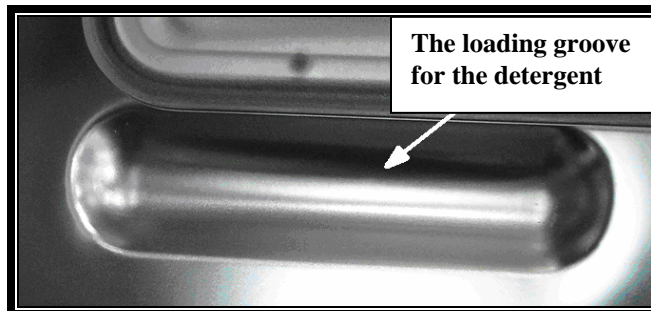

- THE DETERGENT LOADING GROOVE (pictured above) ON THE INSIDE DOOR PANEL WILL HOLD APPROX. 7 GRAMS OF DETERGENT. ALWAYS FOLLOW THE DETERGENT MANUFACTURER'S GUIDELINES.

**BEFORE YOU LOAD YOUR DISHWASHER,**  
MAKE SURE THAT YOUR DISHWASHER IS CONNECTED TO THE COLD WATER SUPPLY.  
CHECK THAT THE FILTER (ITEM 11 IN THE DIAGRAM ON PAGE 5) IS SECURELY IN PLACE.

## **LOADING YOUR DISHWASHER**

*PUSH THE DOOR RELEASE BUTTON (ITEM 3 ON DIAGRAM ON PAGE 5) TO OPEN THE DOOR.*


**NOTE:**

FOR BEST PERFORMANCE, FOLLOW THESE LOADING GUIDELINES. FEATURES AND APPEARANCE OF RACK & CUTLERY BASKET MAY VARY FROM YOUR MODEL.

**IMPORTANT:** CLEAN OFF LARGE FOOD SEDIMENTS BEFORE PLACING DISHES IN THE DISHWASHER. GET RID OF AS MUCH SAUCE AND GREASE AS POSSIBLE AND EMPTY CUPS & GLASSES.

**YOUR DISHWASHER IS DESIGNED TO RECEIVE A STANDARD '4 PIECE' PLACE SETTING CONSISTING OF THE FOLLOWING:**

1. 4 DINNER PLATES
2. 4 BREAD & BUTTER PLATES
3. 4 FRUIT BOWLS
4. 4 CUPS AND SAUCERS
5. 4 GLASS CUPS
6. 4 DINNER FORKS
7. 4 DINNER KNIVES
8. 4 SALAD FORKS
9. 4 TEASPOONS
10. 2 SERVING SPOONS
11. 1 SERVING SPOON
12. 1 SERVING FORK
13. 1 SERVING BOWL
14. 1 OVAL PLATTER

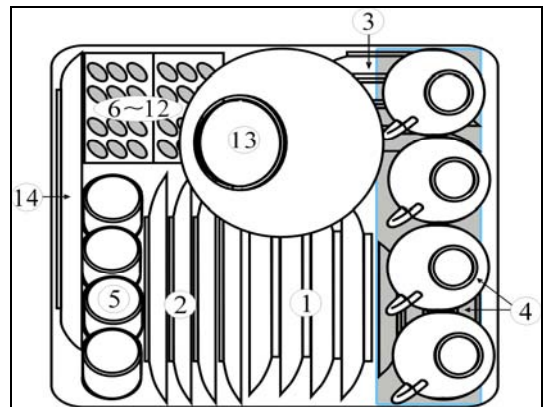

**NOTE:**

FOR EASE OF LOADING / UNLOADING LARGE SIZE DINNER PLATES FROM THE DISH RACK, YOU MIGHT HAVE TO (TEMPORARILY) REMOVE THE CUTLERY BASKET. WHEN LOADING / UNLOADING IS COMPLETE, RETURN THE CUTLERY BASKET TO ITS ORIGINAL POSITION.

**PREPARING YOUR DISHES FOR WASHING:**

**NOTE: DISHES WITH DRIED-ON FOODS ARE MORE DIFFICULT TO WASH AND MAY NOT COME OUT CLEAN FROM A NORMAL WASH CYCLE.**

**WHEN LOADING ITEMS TO BE WASHED:**

- |  |  |
|--|--|
| <ul style="list-style-type: none"><li>• PLACE SHARP ITEMS SO THAT THEY ARE NOT LIKELY TO DAMAGE THE DOOR SEAL.</li><li>• ARRANGE ALL ITEMS WITH RECESSED OR CURVED SECTIONS (BOWLS, ETC.) ON A SLANT TO DRAIN WATER AWAY.</li><li>• CUPS, POTS, GLASSES, ETC. SHOULD BE PLACED UPSIDE DOWN.</li><li>• LOAD SHARP KNIVES WITH THE HANDLES UP TO REDUCE THE RISK OF CUT-TYPE INJURIES.</li><li>• DO NOT LOAD PLASTIC ITEMS UNLESS THEY ARE MARKED 'DISHWASHER SAFE' OR THE EQUIVALENT. FOR PLASTIC ITEMS NOT SO MARKED, CHECK THE MANUFACTURER'S RECOMMENDATIONS.</li><li>• DO NOT LOAD GLASSES OVER THE DISH RACK PINS. GLASSES LOADED OVER DISH RACK PINS ARE NOT PROPERLY SUPPORTED AND ARE</li></ul> | <ul style="list-style-type: none"><li>LIKELY TO GET DAMAGED.</li><li>• ITEMS WITH WOODEN OR BONE HANDLES AND ITEMS JOINED TOGETHER WITH GLUE ARE UNSUITABLE AS THEY CANNOT RESIST HOT WATER.</li><li>• DO NOT TOUCH THE HEATING ELEMENT DURING OR IMMEDIATELY AFTER USE.</li><li>• DO NOT OPERATE YOUR DISHWASHER UNLESS ALL ENCLOSURE PANELS ARE PROPERLY IN PLACE.</li><li>• DO NOT TAMPER WITH CONTROLS.</li><li>• DO NOT ABUSE, FORCE, SIT ON, OR STAND ON THE OPEN DOOR OR DISH-RACK OF THE DISHWASHER. THE MACHINE MAY TOPPLE OVER.</li><li>• PROTECT CABLES AND HOSES FROM HIGH TEMPERATURES.</li></ul> |
|--|--|

**DO NOT PUT THESE ITEMS IN YOUR DISHWASHER:**

- |   |   |  |
|---|---|--|
| <ul style="list-style-type: none"><li>• BRONZE CUTLERY</li><li>• SAUCEPANS WITH</li></ul> | <ul style="list-style-type: none"><li>WOODEN HANDLES</li><li>• CUTLERY WITH</li></ul> | <ul style="list-style-type: none"><li>WOODEN, HORN, CHINA OR MOTHER OF PEARL HANDLES</li></ul> |
|---|---|--|

- |   |  |   |
|---|--|---|
| <ul style="list-style-type: none"><li>• PLASTIC ITEMS THAT ARE NOT HEAT RESISTANT</li><li>• OLDER CUTLERY WITH GLUED PARTS</li><li>• BONDED CUTLERY ITEMS OR DISHES</li></ul> | <ul style="list-style-type: none"><li>• PEWTER OR COPPER ITEMS</li><li>• LEAD CRYSTAL GLASS</li><li>• STEEL ITEMS SUBJECT TO RUSTING</li><li>• WOODEN PLATTERS</li></ul> | <ul style="list-style-type: none"><li>• ITEMS MADE FROM SYNTHETIC FIBRES (eg. SPONGES)</li><li>• DELICATE, REPAIRED OR PAINT / PATTERN OVERLAID CHINA</li></ul> |
|---|--|---|

**Note:**

**Do not wash stainless steel and silver cutlery together. Iron objects can rust and stain other items. Aluminium tends to go black. Copper, pewter & brass stain.**

**NOTE:**

- **WHEN YOU ARE SATISFIED YOU HAVE LOADED ALL THE UTENSILS AND DISHES YOU WANT TO WASH AND HAVE ADDED THE PROPER AMOUNT OF DETERGENT TO THE DISPENSER, ENSURE THE RACK IS PUSHED ALL THE WAY BACK INTO YOUR DISHWASHER AND CLOSE THE DOOR.**
- **YOU ARE NOW READY TO START A WASH CYCLE (SEE NEXT PAGE).**
- **CHECK TO MAKE SURE THAT THE ROTATING SPRAY ARM CAN TURN FREELY ALL THE WAY ROUND. IF NECESSARY, REMOVE ANYTHING BLOCKING IT.**

## **STARTING A WASH CYCLE – OPERATING INSTRUCTIONS**


TO USE YOUR DISHWASHER:

1. CHECK THAT THE INLET AND DRAIN HOSES ARE CORRECTLY AND SECURELY CONNECTED.
2. CLOSE THE DOOR FIRMLY.
3. OPEN THE WATER SUPPLY.
4. PUSH THE POWER (ON/OFF) BUTTON.

PUSH BUTTON IN = POWER ON  
PUSH SO BUTTON IS OUT = POWER OFF

THE LCD AND THE POWER LIGHT WILL NOW ILLUMINATE INDICATING THE MACHINE IS RECEIVING POWER.

5. *NOW SELECT THE DESIRED PROGRAM BY PRESSING THE PROGRAM KEY. THE LCD WILL DISPLAY THE WASHING MODE YOU SELECTED.*

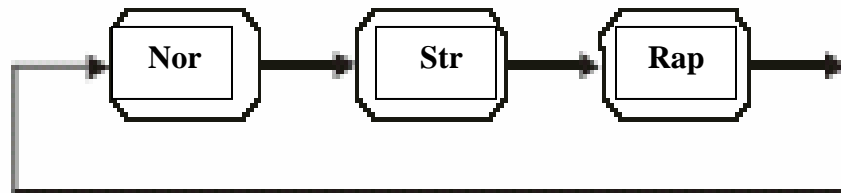

6. PRESS THE PAUSE/START KEY TO START. THE LCD WILL FLASH THE PROGRAM AND THE WASHING STATUS DURING OPERATION.
7. AT THE END OF THE CYCLE, THE DISHWASHER WILL STOP AND THE LCD WILL STOP FLASHING AND THE DISHWASHER WILL BEEP. NOTE: THE LCD WILL BE BLACK WHEN THE MACHINE DOES NOT RUN OR OPERATE FOR MORE THAN 10 MINUTES. THE POWER LIGHT WILL STAY LIT UNTIL THE POWER (ON/OFF) BUTTON IS SWITCHED OFF.
8. THE DISHWASHER IS DESIGNED TO STOP IF THE DOOR IS OPENED ACCIDENTALLY DURING OPERATION.
9. YOU CAN SELECT ANOTHER PROGRAM DURING OPERATION BY PRESSING THE PAUSE/START KEY FIRST, THEN PRESSING THE PROGRAM KEY TO THE DESIRED PROGRAM, AND PRESSING THE PAUSE/START KEY TO START. PLEASE NOTE THAT YOU HAVE A LIMITED TIME TO CHANGE TO ANOTHER PROGRAM BEFORE YOUR DISHWASHER BECOMES SET ON THE OLD PROGRAM.
10. AFTER WASHING, DISHES SHOULD BE ALLOWED TO COOL DOWN FOR ABOUT 15 MINUTES SO THEY ARE NOT TOO HOT TO HANDLE. DISHES WILL COOL QUICKER IF THE DOOR IS OPENED SLIGHTLY.

**11. AFTER UNLOADING THE DISWASHER, REMOVE THE FILTER, CLEAN OFF ANY BITS OF FOOD, AND PUT THE FILTER BACK IN ITS POSITION.**

**NOTE:** AT THE BEGINNING OF EACH CYCLE, THE DISHWASHER ALWAYS STARTS IN THE 'DRAIN' MODE. THIS IS BECAUSE THE DRAIN PUMP ALWAYS RETAINS A SMALL AMOUNT OF WATER (IN THE SUMP) FROM THE PREVIOUS CYCLE. THIS IS NECESSARY TO KEEP THE PUMP PRIMED. THEREFORE, DO NOT BE ALARMED IF YOU SEE A SMALL AMOUNT OF WATER BEING PUMPED-OUT FROM THE DRAIN HOSE PRIOR TO THE START OF THE REGULAR WASH CYCLE. THIS IS NORMAL.

## **THESE ARE THE PROGRAM CYCLES:**

<b>PROGRAM TYPE</b>	<b>WATER TEMPERATURE</b>	<b>PROGRAM DURATION &amp; HEATING TIME</b>	<b>WATER USED</b>
STRONG WASH	62°C	75 MINS.	14 LITRES
NORMAL WASH	62°C	67 MINS.	12 LITRES
RAPID WASH	55°C	35 MINS.	6 LITRES

**(NOTE:** THE WASHING TIME MAY VARY ACCORDING TO THE INCOMING WATER TEMPERATURE AND THE ENVIRONMENTAL TEMPERATURE. FOR EXAMPLE, A NORMAL WASHING CYCLE OF 67°C HAS BEEN RECORDED TO LAST FOR 78 MINS.)

## **FILTERING SYSTEM**


**FOR YOUR CONVENIENCE, WE HAVE PLACED THE FILTERING SYSTEM WITHIN EASY REACH INSIDE THE TUB. THE FILTER REMOVES BITS OF FOOD TRAPPED IN THE FILTER FROM THE WASH WATER SO IT CAN BE RECIRCULATED DURING THE CYCLE. THERE ARE THREE PARTS TO THE FILTERING SYSTEM:**

- 1) THE STAINLESS STEEL MICRO FILTER - LOCATED AT THE BOTTOM OF THE INNER BOX. THIS PERFORATED STAINLESS STEEL PLATE TRAPS LARGE PARTICLES OF FOOD THAT WOULD OTHERWISE BE RECIRCULATED AROUND WITH THE DISHWATER DURING A CYCLE.
- 2) THE CONICAL FILTER. THIS IS THE FIRST CIRCULAR-SHAPED FILTER THAT LIES IMMEDIATELY IN THE HOLE OF THE MICROFILTER PLATE. THIS WILL TRAP LARGE PIECES OF FOOD, ETC.
- 3) THE FINE MESH FILTER. THIS IS THE SECOND CIRCULAR-SHAPED FILTER THAT LIES ON THE OUTSIDE OF THE COARSE FILTER. IT CATCHES AND TRAPS FINER DEBRIS FROM THE WASH WATER AS IT TRAVELS THROUGH THE FILTERING SYSTEM, ENABLING THE WASH WATER TO STAY FREE OF FOOD RESIDUES.

## *Caring for your Dishwasher*


### *CLEANING THE OUTSIDE SURFACES OF YOUR APPLIANCE*

- TO CLEAN THE EXTERIOR OF YOUR DISHWASHER (INCLUDING THE CONTROL PANEL), USE A LIGHTLY DAMPENED CLOTH THEN DRY THOROUGHLY. **NEVER USE SHARP OBJECTS, SCOURING PADS OR HARSH CLEANERS ON ANY PART OF THE APPLIANCE. SOME PAPER TOWELS CAN SCRATCH.**

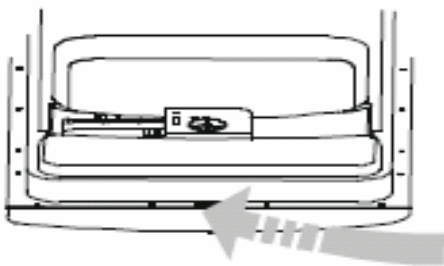

- TO CLEAN THE EDGE AROUND THE DOOR, ONLY EVER USE A SOFT WARM, DAMP RAG. DO NOT USE A SPRAY CLEANER HERE OR WHEN CLEANING THE DOOR PANEL AS THIS MAY HARM THE DOOR LOCK AND ELECTRICAL PARTS.

## ***CLEANING THE SPRAY ARMS***

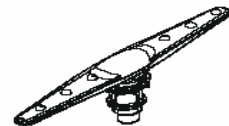

THE SPRAY ARMS NEED REGULAR CLEANING AS HARD WATER RESIDUES WILL CLOG THEIR JETS & BEARINGS. TO REMOVE THE SPRAY ARM, SCREW OFF THE NUT TO TAKE OUT THE WASHER ON TOP OF THE SPRAY ARM AND REMOVE THE ARM. WASH THE ARMS IN SOAPY WARM WATER & USE A SOFT BRUSH TO CLEAN THE JETS. REPLACE THE SPRAY ARM AFTER RINSING IT THOROUGHLY.

## ***CLEANING THE FILTERS***

- THE FILTER ASSEMBLY MUST BE KEPT CLEAN FOR BEST PERFORMANCE. You should remove the larger bits of food trapped in the filter after each wash cycle by rinsing them under running water. **To remove the filter assembly, pull up on the cup handle.**
- ***The entire filter assembly should be cleaned at least once a month.***
- To clear the coarse filter and the fine filter, use a cleaning brush. Then, reassemble the filter parts as shown in the figure above and reinsert the entire assembly in the dishwasher in its seat & press downward to secure it.
- Improper replacement of the filter may impair appliance performance and damage dishes and utensils.

- ***Warning - never run the dishwasher **without the filters** in place!***
- ***Warning - Before cleaning the inner cavity of the appliance always allow 15 minutes for the Element to cool down to avoid injury!***

## **HOW TO KEEP YOUR DISHWASHER IN SHAPE**

**AFTER EVERY WASH**, leave the door slightly ajar so that moisture and odours are not trapped inside.

**REMOVE THE PLUG** before cleaning or performing maintenance. Never run the risk of electric shocks.

**DO NOT USE SOLVENTS OR ABRASIVE CLEANING AGENTS** to clean the exterior and the rubber parts of the dishwasher. Only use a cloth and warm soapy water. To remove spots or stains from the surface of the interior, use a cloth dampened with water and a little white vinegar, or a cleaning product made specifically for dishwashers.

**WHEN YOU GO ON HOLIDAY**, run a wash cycle with the dishwasher empty. Then unplug it, turn off the water supply and leave the door slightly ajar to prevent odours and mould from developing.

**MOVING THE APPLIANCE** is possible but KEEP IT UPRIGHT.

**SEALS** can trap food, which in turn will cause odours. Periodic cleaning with a damp cloth or sponge will prevent this from becoming a problem.

**PROTECTING YOUR DISHWASHER AGAINST FREEZING**

*If your dishwasher is left in an unheated place during the winter, ask a service technician to:*

- 1) Cut off electrical power to the dishwasher. Remove fuses or trip circuit breaker.
- 2) Turn off the water supply and disconnect the water inlet pipe from the water valve & discharge hoses.
- 3) Drain water from the inlet pipe and water valve (Use a pan to catch the water).
- 4) Reconnect the water inlet pipe to the water valve.
- 5) Remove the plastic sump cover in the tub bottom and use a sponge to soak up water in the rubber boot.

**COMMON DISHWASHING PROBLEMS AND SOLUTIONS**

**NOTE:** MANY PROBLEMS CAN BE RECTIFIED BY CONSULTING THE TROUBLE-SHOOTING CHART. DOING THIS MAY SAVE YOU NEEDING A SERVICE ENGINEER.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
<i>DISHWASHER WON'T START</i>	<ul style="list-style-type: none"> <li>• DISHWASHER NOT RECEIVING ELECTRICAL POWER</li> </ul>	<ul style="list-style-type: none"> <li>• CHECK ELECTRICAL CONNECTION, FUSE/CIRCUIT BREAKER</li> </ul>
	<ul style="list-style-type: none"> <li>• DOOR IS UNLATCHED</li> </ul>	<ul style="list-style-type: none"> <li>• CLOSE &amp; LATCH DOOR</li> </ul>
	<ul style="list-style-type: none"> <li>• DISHWASHER NOT LEVEL</li> </ul>	<ul style="list-style-type: none"> <li>• LEVEL UNIT.</li> </ul>
<i>DISHES NOT CLEAN</i>	<ul style="list-style-type: none"> <li>• IMPROPER LOADING</li> </ul>	

		<ul style="list-style-type: none"> <li>• ARRANGE DISHES SO SPRAY ACTION REACHES ALL SURFACES.</li> <li>• DO NOT OVERLOAD DISHWASHER.</li> </ul>
	<ul style="list-style-type: none"> <li>• SPRAY ARM NOT ROTATING FREELY</li> </ul>	<ul style="list-style-type: none"> <li>• CHECK SPRAY ARM TO MAKE SURE NOTHING (EG. CUTLERY) IS OBSTRUCTING SPRAY ARM LOCATION.</li> <li>• CHECK IF FILTER SCREEN HAS BECOME DISLODGED AND OBSTRUCTING SPRAY ARM ROTATION.</li> </ul>
	<ul style="list-style-type: none"> <li>• NOT ENOUGH DETERGENT AND/OR IMPROPER DETERGENT BEING USED.</li> </ul>	<ul style="list-style-type: none"> <li>• USE MORE DISHWASHER DETERGENT.</li> <li>• DO NOT USE DETERGENT THAT IS HARD OR CRACKED.</li> <li>• USE ONLY A RECOMMENDED DISHWASHER DETERGENT.</li> </ul>
	<ul style="list-style-type: none"> <li>• IMPROPERLY PREPARED DISHES</li> </ul>	<ul style="list-style-type: none"> <li>• EXCESS FOOD SOIL AND LIQUIDS SHOULD BE REMOVED FROM DISHES BEFORE LOADING.</li> </ul>
	<ul style="list-style-type: none"> <li>• WATER INLET HOSE KINKED/ BENT DUE TO IMPROPER INSTALLATION.</li> </ul>	<ul style="list-style-type: none"> <li>• UNDO KINK OR BEND IN INLET HOSE.</li> </ul>
	<ul style="list-style-type: none"> <li>• THE FILTER LOSES ITS POSITION</li> </ul>	<ul style="list-style-type: none"> <li>• ENSURE THE FILTER IS RETURNED TO ITS RIGHT PLACE.</li> </ul>
<i>CHIPPING OR BREAKING GLASSWARE</i>	<ul style="list-style-type: none"> <li>• IMPROPER LOADING OF DISHES</li> </ul>	<ul style="list-style-type: none"> <li>• DO NOT OVERLOAD DISH RACK. LOAD GLASSES ON THE BOTTOM RACK ONLY.</li> </ul>
<i>WATER REMAINS IN BOTTOM</i>	<ul style="list-style-type: none"> <li>• A SMALL AMOUNT OF WATER (IN SUMP AREA) IS NORMAL.</li> </ul>	<ul style="list-style-type: none"> <li>• THIS IS NECESSARY TO KEEP THE PUMP PRIMED AND IS DRAINED AUTOMATICALLY AT THE BEGINNING OF EACH CYLCE.</li> </ul>
	<ul style="list-style-type: none"> <li>• EXCESSIVE AMOUNT OF WATER;</li> <li>• CYCLE NOT COMPLETED.</li> </ul>	<ul style="list-style-type: none"> <li>• ALLOW DISHWASHER TO COMPLETE ITS FULL CYCLE.</li> </ul>

## **ERROR CODES - WHAT THEY MEAN**

*\* YOUR DISHWASHER MAY EXPERIENCE A FAULT. SHOULD THIS HAPPEN, A CODE CONSISTING OF 'E' & A NUMBER FROM 1-7 CAN BE DISPLAYED.*

**USE THIS TABLE TO UNDERSTAND WHAT IS WRONG.**

**\*NOTE\***: ALWAYS CALL FOR A **Baumatic Ltd** ENDORSED / APPROVED SERVICE TECHNICIAN TO CARRY OUT REPAIRS.

<i>CODE</i>	<i>SYMPTOM:</i>	<i>CAUSE:</i>	<i>WHAT TO DO:</i>
-------------	-----------------	---------------	--------------------

'E1'	LONGER FILL TIME.	FAUCET IS NOT OPENED.	Ensure that inlet hose is not kinked or crushed.
'E2'	LONGER or EXTENDED DRAINING TIME	THE DRAIN PIPE WAS PLACED TOO HIGH WHEN IT WAS INSTALLED.	Ensure drainage system is as per manual and not extended.
'E3'	LONGER HEATING TIME – NOT REACHING REQUIRED TEMPERATURE	MALFUNCTION OF TEMPERATURE SENSOR OR OF HEATING ELEMENT.	CALL FOR A QUALIFIED SERVICE TECHNICIAN.
'E4'	OVERFILLED	TOO MUCH INLET WATER.  *NOTE * - THERE ARE NUMEROUS CAUSES OF AN 'E4' MESSAGE. REFER TO APPLIANCE USAGE SECTION OF THIS MANUAL FOR GUIDELINES ON HOW TO PREVENT AN OVERFILL.	Overdosing. 3-in-1 put in with salt and/or rinse aid in the appliance =overdose.  Could also be a Water Pressure problem.
'E5' *	SWITCH CANNOT SHUT OFF AUTOMATICALLY – PROGRAM NOT FINISHING ITS CYCLE.	LOW VOLTAGE OR POWER SWITCH FAILURE.  *** NOTE – DEPENDING ON YOUR MODEL, YOU MAY NOT RUN INTO THIS ERROR ****	CALL FOR A QUALIFIED SERVICE TECHNICIAN.
'E6'	OPEN CIRCUIT	THERMOSTAT.	CALL FOR A QUALIFIED SERVICE TECHNICIAN.
'E7'	SHORT CIRCUIT	THERMOSTAT.	CALL FOR A QUALIFIED SERVICE TECHNICIAN.

**WARNING!**

IF OVERFLOW OCCURS, TURN OFF THE MAIN WATER SUPPLY BEFORE CALLING A SERVICE TECHNICIAN. IF THERE IS WATER IN THE BASE OF THE TANK PAN BECAUSE OF AN OVERFILL OR SMALL LEAK, THE WATER SHOULD BE REMOVED BEFORE RESTARTING THE DISHWASHER.



**INSTALLATION**

**ELECTRICAL NOTES**

YOU NEED AN ELECTRICAL SUPPLY OF 220-240 VOLTS ONLY, 50HZ.


MAKE SURE YOU HAVE A SUITABLE ELECTRICAL SUPPLY SOCKET CLOSE TO WHERE YOU WANT TO PLACE THE DISHWASHER. FOR YOUR PERSONAL SAFETY, THE APPLIANCE MUST BE EARTHED. THE APPLIANCE IS EQUIPPED WITH A POWER SUPPLY CORD HAVING A 3-PIN GROUNDING PLUG. TO MINIMIZE POSSIBLE SHOCK

HAZARDS, IT MUST BE PLUGGED INTO A MATCHING 3-PIN GROUNDING TYPE ELECTRICAL OUTLET.

IF THE MAINS PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME OR IS REMOVED FOR ANY OTHER REASON, THEN THE CUT OFF PLUG SHOULD BE DISPOSED OF SAFELY TO PREVENT THE HAZARD OF ELECTRIC SHOCK.

## INSTALLATION INSTRUCTIONS

1. REMOVE ALL PACKING MATERIALS CAREFULLY
2. THE WATER INLET HOSE FROM THE MACHINE ENDS IN A 3/4" FEMALE CONNECTOR (IE. - TUBE/HOLE/SOCKET OPENING). THE WATER SUPPLY SHOULD THEREFORE END IN A SIMILAR MALE CONNECTOR (IE. – PIPE / PRONG ENDED) AND THERE SHOULD BE A STOPCOCK CLOSE BY IN THE PIPE.  
YOU SHOULD CONNECT THE STRAIGHT CONNECTOR OF THE INLET HOSE TO THE WATER SUPPLY SECURELY. CONNECT THE OTHER END (BENT CONNECTOR) TO THE WATER INLET VALVE AT THE BACK OF THE DISHWASHER CABINET. DO NOT OVERTIGHTEN OR YOU WILL DAMAGE THE THREADS.
3. PREPARE THE DRAINAGE HOSE SO IT HAS A HOOKED END. USE THE PLASTIC U-BEND FITTING PROVIDED FOR THIS PURPOSE. THE END OF THIS SHOULD BE DROPPED INTO A DRAINAGE STANDPIPE. THIS STANDPIPE SHOULD BE NO MORE THAN 6" ABOVE THE BASE OF THE DISHWASHER. TO ALLOW FOR AN AIR GAP AROUND THE END OF THE DRAIN HOSE, THE DIAMETER OF THE STANDPIPE SHOULD BE AT LEAST 30MM. CONNECT THE OTHER END OF THE DRAIN HOSE (L-SHAPED) TO THE DRAIN PORT CONNECTION AT THE BACK OF THE DISHWASHER CABINET (SEE PAGE 5). TIGHTEN THE DRAIN HOSE END ON TO THE DRAIN PORT USING THE METAL CLIP INCLUDED IN THE PACKAGE.
4. IF YOU WANT, YOU CAN CONNECT THE WATER INLET HOSE TO THE KITCHEN SINK TAP. YOU MUST OBTAIN CORRECT FITTINGS / ADAPTORS TO MATCH THE INLET HOSE CONNECTORS TO ENSURE A SECURE CONNECTION. HOWEVER, PERMANENT PLUMBING IS RECOMMENDED.

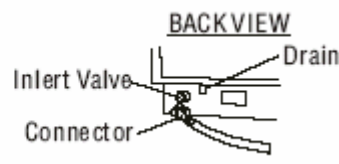

5. IF YOU FIND A LEAK, SHUT THE WATER SUPPLY OFF IMMEDIATELY AND CHECK THE HOSE CONNECTIONS FULLY. TIGHTEN CONNECTIONS, IF NEEDS BE.
6. IF FOR ANY REASON YOU ARE UNABLE TO STOP THE LEAK YOURSELF, PLEASE SEEK ADVICE FROM A QUALIFIED PLUMBER.
7. THE MINIMUM HEIGHT CLEARANCE REQUIRED TO INSTALL YOUR DISHWASHER ON A COUNTERTOP SURFACE WITH OVERHEAD CUPBOARDS IS 19" (48CM).
8. MAKE SURE THERE IS AN ELECTRICAL POWER SUPPLY WITHIN EASY REACH OF THE MACHINE. THE POWER CORD IS 6 FEET (182.8CM) LONG.
9. THE DISHWASHER MUST BE INSTALLED ON A 'SOLID' LEVEL SURFACE.
10. TO LEVEL THE DISHWASHER, ADJUST THE 4 LEVEL SCREWS (FEET) UNDER THE DISHWASHER.

## **WATER PRESSURE**

FOR BEST OPERATING RESULTS, INCOMING WATER PRESURE SHOULD BE BETWEEN **0.5** AND **10 BAR**. INCOMING WATER SUPPLY FOR THE DISHWASHER IS CONTROLLED BY A 'PRESSURE SWITCH' APPLICATION, SO IF THE WATER PRESSURE IN YOUR HOME IS LOW, THE DISHWASHER WILL TAKE LONGER TO FILL WITH WATER.

**WARNING: DO NOT CONNECT YOUR MINI 4 TO A HOT TAP!**

### **FOR BEST RESULTS:**

YOUR DISHWASHER CLEANS BY SPRAYING A MIXTURE OF HOT CLEAN WATER AND DETERGENT (UNDER PRESSURE) AGAINST THE SOILED SURFACE OF DISHES. THE WATER IS PUMPED THROUGH A ROTATING SPRAY ARM, DRAINED THROUGH A FILTER REMOVING FOOD AND SOILED PARTICLES AND PUMPED BACK THROUGH THE SPRAY ARM.

SOILED WATER IS PUMPED OUT AND REPLACED WITH CLEAN WATER AT THE END OF EACH CYCLE (THE NUMBER OF TIMES DEPENDS ON THE CYCLE BEING USED). FOR BEST CLEANING RESULTS, THE WATER TEMPERATURE MUST BE AT LEAST 130<sup>o</sup>F (55<sup>o</sup>C). TO PREVENT DISHWASHER DAMAGE, THE TEMPERATURE OF THE INCOMING WATER SUPPLY **SHOULD NEVER EXCEED 160<sup>o</sup>F (71<sup>o</sup>C).**

**NOTE:** HARD WATER CONDITIONS WILL REDUCE THE PERFORMANCE EFFECTIVENESS AND ABILITY OF YOUR DISHWASHER. HARD WATER CONDITIONS WILL ALSO

CONTRIBUTE TO 'LIME' (WHITE FILM SUBSTANCE) DEPOSITS AND / OR 'SCALING' ON THE STAINLESS STEEL SURFACE OF THE DISHWASHER TUB AND 'HEATER ELEMENT' LOCATED IN THE SUMP UNDERNEATH THE REMOVABLE FILTER SCREEN. TO ASSIST IN MINIMIZING THESE CONDITIONS, YOU SHOULD PERIODICALLY OPERATE / RINSE THE INSIDE OF THE DISHWASHER (EMPTY) USING 1 CUP OF VINEGAR (AT LEAST ONCE A WEEK).

## **DISCONNECTING YOUR DISHWASHER**

- CLOSE THE WATER SUPPLY AT THE STOPCOCK.
- DISCONNECT THE POWER SUPPLY CORD.
- DISCONNECT THE INLET HOSE ASSEMBLY FROM THE WATER SUPPLY. WHEN THE DISHWASHER IS NOT IN USE, PLACE/STORE THE HOSE ON THE HANGER HOSE BRACKET LOCATED ON THE REAR WALL OF THE DISHWASHER CABINET.
- APPLIANCES THAT ARE TO BE DISCARDED MUST BE MADE UNUSABLE. PULL OFF THE PLUG, REMOVE CABLE AND MAKE THE DOOR LOCK AND LATCH USUABLE.

### **! IMPORTANT !**

Once you open the water supply line, (even if it is closed immediately thereafter) the water inlet hose will be pressurized.

### **! CAUTION !**

 
DO NOT LET CHILDREN DISCONNECT THE DISHWASHER. Close supervision of children is always important around appliances.

## **DISHWASHER CHARACTERISTICS**

*The BAUMATIC MINI 4 dishwasher model is based firmly on convenience. Apart from having the same general workings as other household dishwashers, it has several extra features.*



**Performance of Dishwasher** - Your dishwasher has a C rated wash performance, C rated drying performance and C rated energy

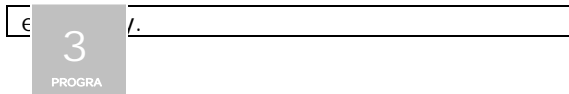



**Overflow protection** - Your dishwasher has an overflow protection program which could automatically shut off the inlet valve and start the drain pump if the water Overflows.



**Error Alarm** - Fault codes display will inform the user of any abnormal status of the machine.



**Stainless steel tub -**

You need not worry about stains to the tub.



**3 Wash programs -**

You can choose desired program according to the soiled level. Such as, intensive

wash, normal wash, and rapid wash.

4

SETTINGS

**4 Place settings -**

Normal wash load of 4 place settings.



**Salt Warning**

**Indicator** - If the salt is running low, this signal will light up on the control panel to alert you to top the salt level up so the machine can keep at its optimum performance level.



**Broad applied**

**voltage** - This appliance uses AC (alternating current) voltage. Please be aware that this will make its operation vulnerable to uneven current in your home and power surges.

**Main technical data**

Model	WP5C/WP5D	WP5CS/WP5DS
Power input	1280W	1280W
Outer dimension	570x480x500	570x480x500
Weight	About 22.8kg	About 22.8kg
Max. water Consumption	13L	14L
Water pressure	0.03~1MPa	0.03~1MPa
Control manner	Automatic	Automatic
Detergent dosage	5~20g	5~20g
Plate setting	4 sets 35 pieces dishware	4 sets 35 pieces dishware

## **FINAL CHECKLIST BEFORE OPERATING**

**NOTE: BEFORE YOU START USING YOUR DISHWASHER,  
PLEASE MAKE SURE YOU HAVE CHECKED:**

- **WHETHER THE DISHWASHER IS LEVEL AND FIXED.**
- **WHETHER THE INLET VALVE IS OPENED.**
- **WHETHER THERE IS LEAKAGE AT THE CONNECTIONS OF THE CONDUCTS.**
- **WHETHER THE WIRES ARE TIGHTLY CONNECTED.**
- **WHETHER THE POWER IS SWITCHED ON.**
- **WHETHER THE INLET AND DRAIN HOSES ARE KNOTTED / KINKED.**
- **WHETHER ALL PACKING MATERIALS & PRINTED MATTER HAVE BEEN REMOVED FROM THE DISHWASHER.**

***PLEASE KEEP THIS MANUAL FOR FUTURE REFERENCE***

## BAUMATIC LTD. - CONDITIONS OF GUARANTEE.

Dear Customer,

The conditions of guarantee which apply to your Baumatic appliance are as follows: This product is guaranteed for 12 months from the date of original purchase.

Baumatic Ltd will repair any defect that arises due to faulty materials or workmanship free of charge during this period.

In addition, your appliance is covered by a 5 year parts warranty. Baumatic Ltd will provide free of charge the parts required to repair the appliance, only if they are fitted by a Baumatic engineer, for any defect that arises due to faulty materials or workmanship within a period of 5 years from the original purchase date.

An additional and annually renewable insurance scheme for labour is available should you wish to extend the warranty period.

Should any person other than an authorised representative of Baumatic Ltd interfere with the appliance, the policy is negated and Baumatic Ltd will be under no further liability.

The guarantee covers the appliance for normal domestic use only, unless otherwise stated.

Any claims made under the terms of the guarantee must be supported by the original invoice/bill of sale issued at the time of purchase.

This guarantee is transferable only with the written consent of Baumatic Ltd.

If the appliance fails and is considered either not repairable or uneconomical to repair between twelve months and five years from purchase date, a free of charge replacement will not be offered.

The guarantee for any replacement will only be for the remainder of the guarantee on the original product purchased.

This guarantee does not cover:

- Sinks and taps
- Failure to comply with the manufacturer's instructions for use.
- The replacement of cosmetic components or accessories.
- Accidental damage or wilful abuse.
- Subsequent loss or damage owing to the failure of the appliance or electrical supply.
- Incorrect installation.
- Losses caused by Acts of God, civil war, failure to obtain spare parts, strikes or lockouts.
- Filters, fuses, light bulbs, external hoses, damage to bodywork, paintwork, plastic items, covers, baskets, trays, shelves, burner bases, burner caps, decals, corrosion, rubber seals, refrigeration system blockage.

In the course of the work carried out it may be necessary to remove the appliance from its operating position. Whilst all reasonable care will be taken, Baumatic Ltd cannot accept responsibility for damage sustained to any property whatsoever in this process.

This guarantee is in addition to and does not diminish your statutory or legal rights.

### Contacting Baumatic.

SALES	SERVICE	SPARES	TECHNICAL / ADVICE
TEL: 0118 933 6900	TEL: 0118 933 6911	TEL: 0118 933 6922	TEL: 0118 9336933
FAX: 0118 931 0035	FAX: 0118 986 9124	FAX: 0118 933 6942	FAX: 0118 9336942

For mainland UK and Northern Ireland, please contact one of the above numbers for further information or any other query you may have.

For ROI (Republic of Ireland), please contact one the numbers below:

TEL: 01-4030501                      FAX: 01-4030503

Thank you for buying Baumatic.

# Baumatic Ltd

*Make-up for your kitchen*

## Headquarters

Baumatic Ltd.  
Baumatic Buildings,  
6 Bennet Road,  
Reading,  
Berkshire  
RG2 0QX, United Kingdom

Sales Telephone  
+44 118 933 6900

Sales Fax  
+44 118 931 0035

Service Telephone  
+44 118 933 6911

Service Fax  
+44 118 986 9124

Spares Telephone  
+44 118 933 6922

Technical / Advice Telephone  
+44 118 933 6933

## E-mail:

[sales@baumatic.co.uk](mailto:sales@baumatic.co.uk)

[technical@baumatic.co.uk](mailto:technical@baumatic.co.uk)

Http (Internet site):  
[www.baumatic.com](http://www.baumatic.com)

Baumatic UK/cod. 1230000666



This appliance is marked according to the European Directive 2002/96/EC on Waste Electrical and Electronic Equipment(WEEE). This guideline is the frame of a Europeanwide validity of return and recycling on Waste Electrical and Electronic Equipment.